


Pushair

by Ray Malmström.
Other half of plan on page 161, the continuation of this page at rear of magazine.

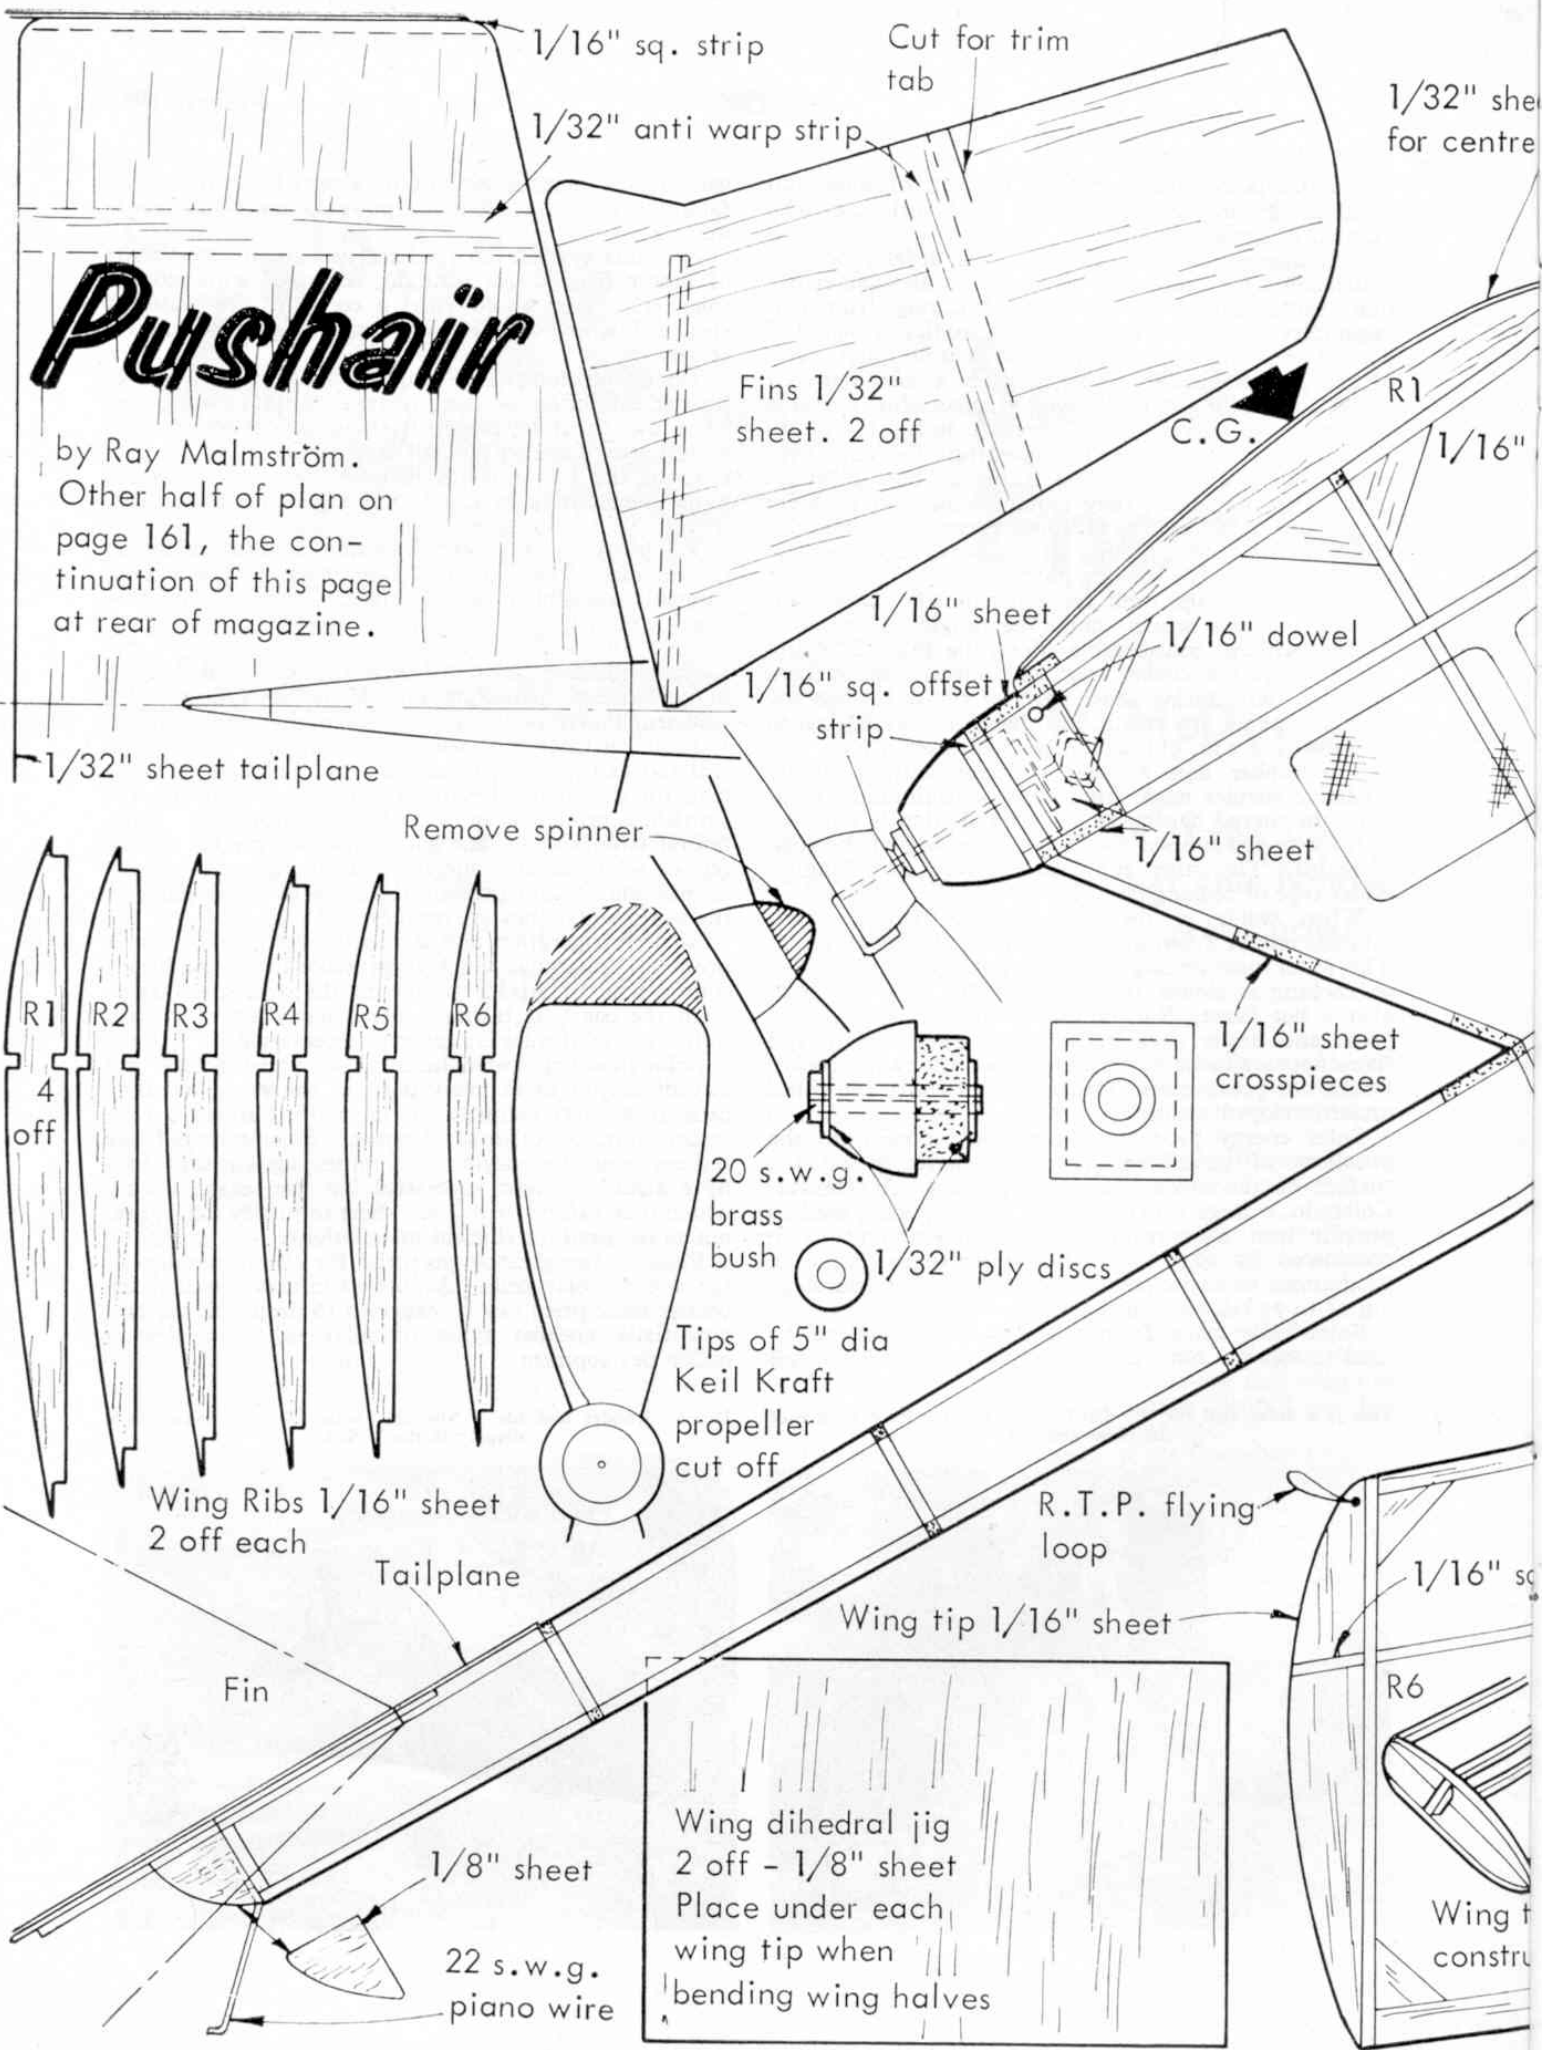

1/16" sq. strip

Cut for trim tab

1/32" anti warp strip

1/32" sheet for centre

Fins 1/32" sheet. 2 off

C.G.

R1

1/16"

1/16" sheet

1/16" dowel

1/16" sq. offset strip

1/16" sheet

1/32" sheet tailplane

Remove spinner

1/16" sheet crosspieces

R1
4 off

R2

R3

R4

R5

R6

20 s.w.g. brass bush

1/32" ply discs

Tips of 5" dia Keil Kraft propeller cut off

Wing Ribs 1/16" sheet 2 off each

Tailplane

R.T.P. flying loop

Wing tip 1/16" sheet

1/16" sq

R6


Wing tip construction

Fin

1/8" sheet

22 s.w.g. piano wire

Wing dihedral jig 2 off - 1/8" sheet Place under each wing tip when bending wing halves

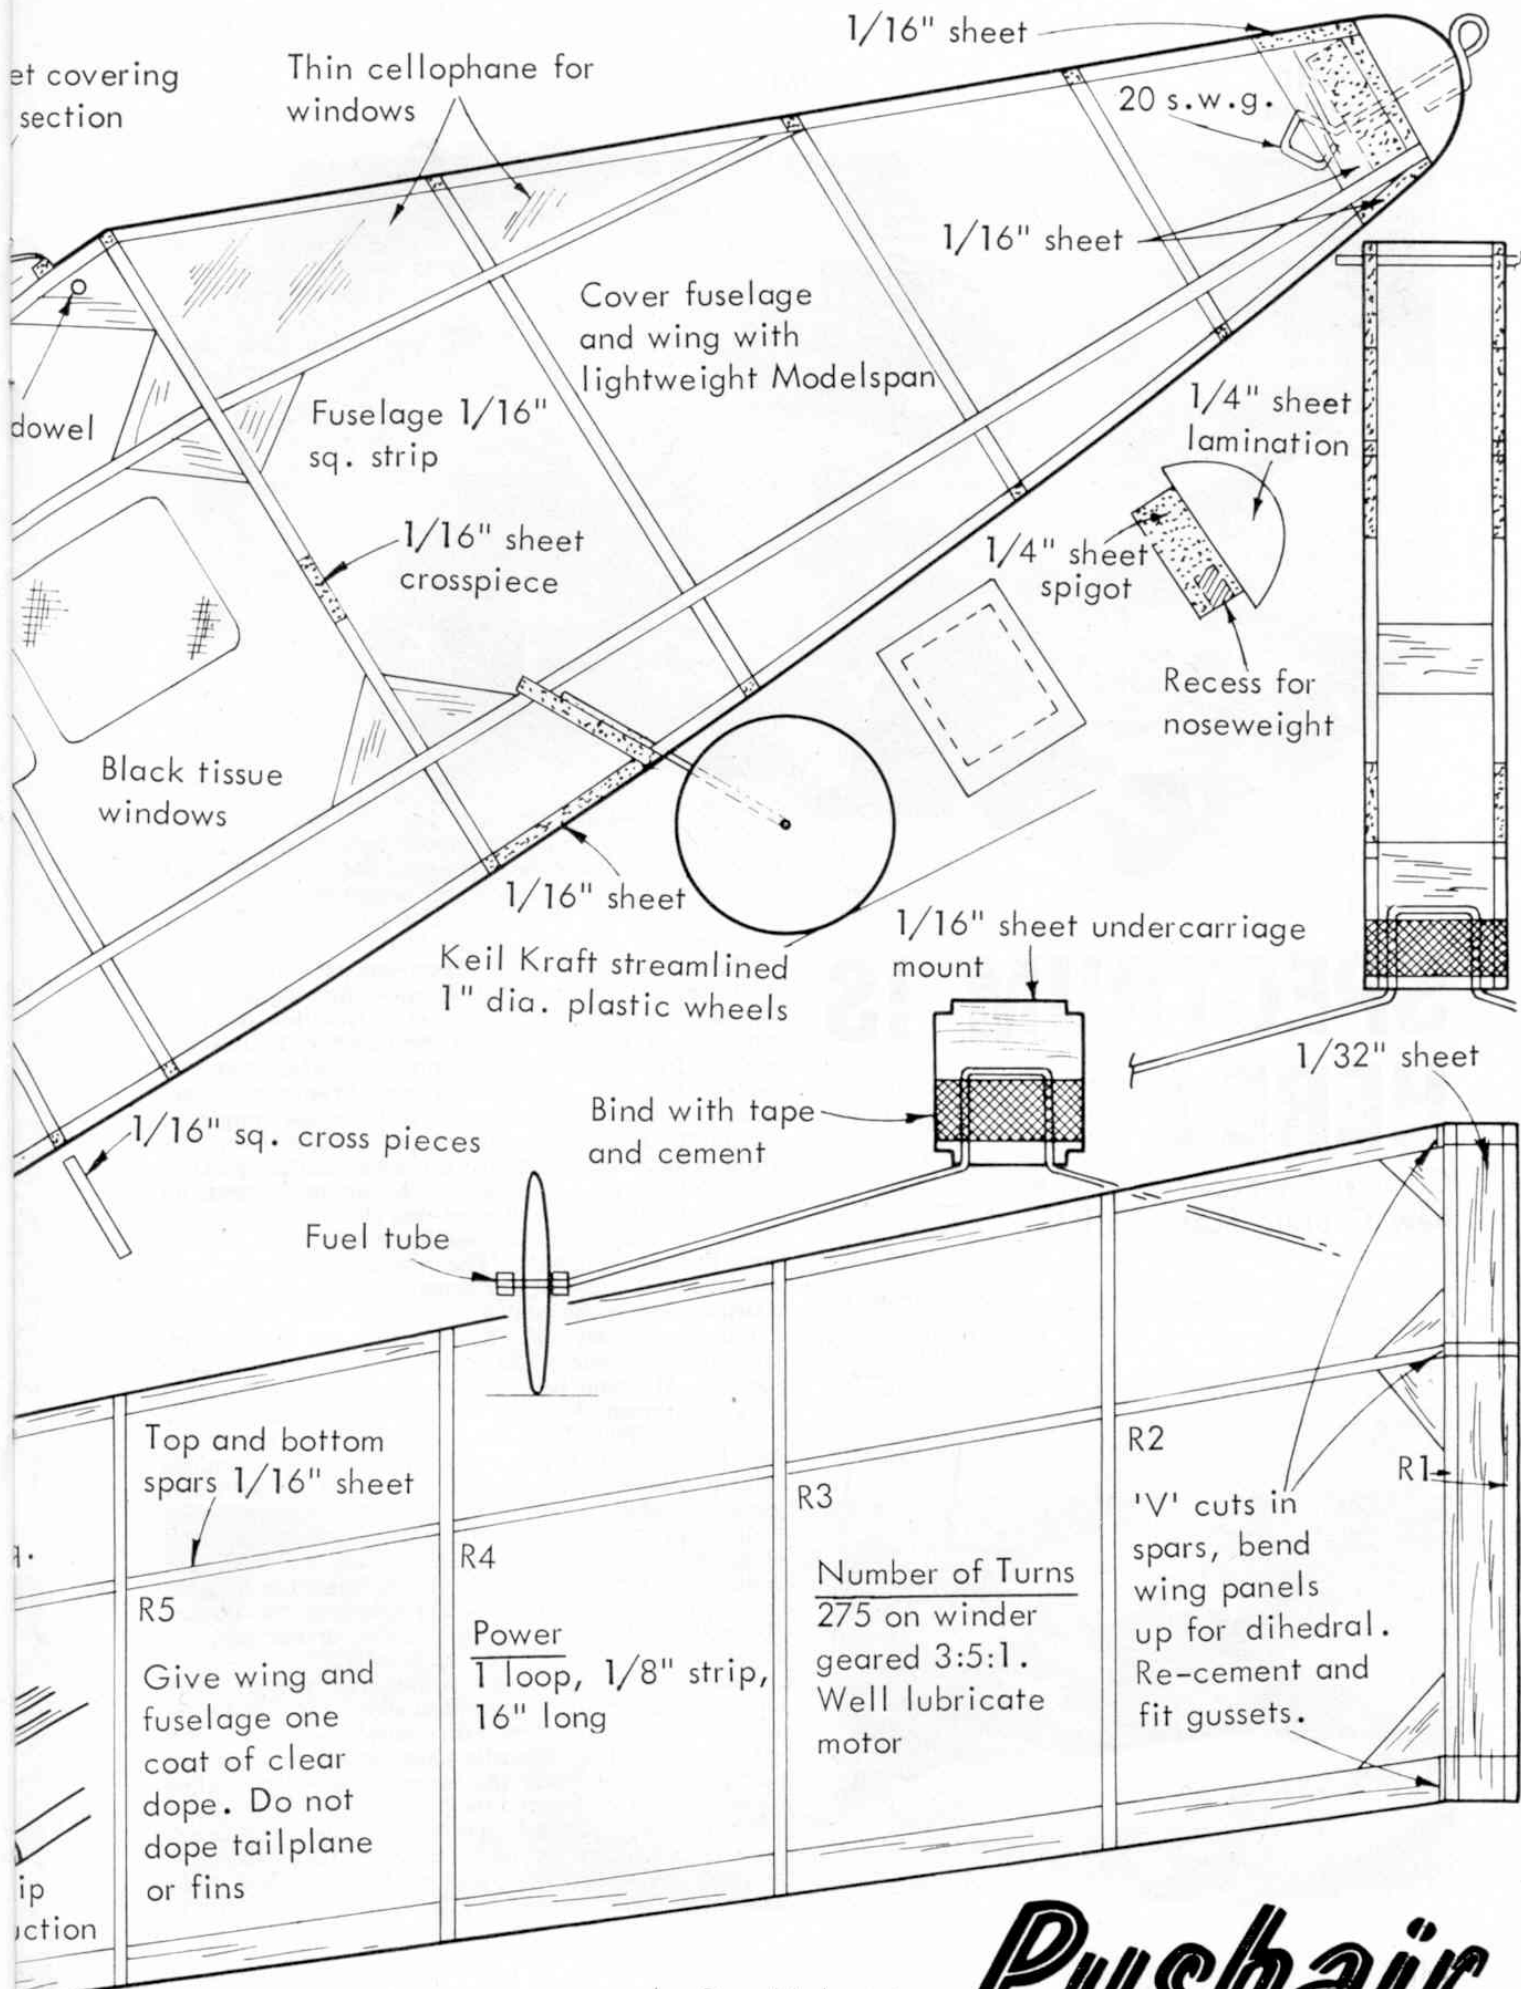

by Ray Malmström

Pushair